
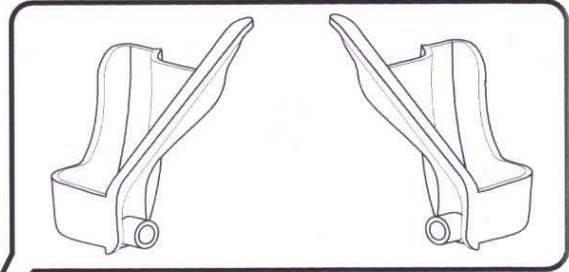


MOUNTAIN INDUSTRIES TOP

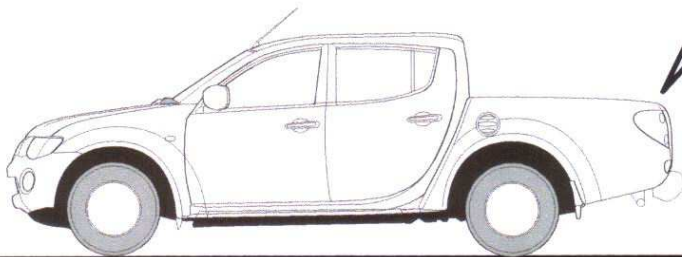

GB	Fitting instruction for	:	DRAIN - TONNEAU COVER
D	Einbauanleitung für	:	ABLAUF LADERAUMABDECKUNG
F	Instructions de montage pour	:	LE DRAIN COUVERCLE DE COFFRE À BAGAGES
NL	Inbouwhandleiding voor	:	AFVOER AFDEKKING BAGAGERUIMTE
E	Instrucciones de montaje para	:	DREN PLANCHA DE PROTECCIÓN DEL ESPACIO DE CARGA
S	Montageanvisning for	:	DRAEN BAGAGERUMSLUCKA

--

Model name	Model year	Body
L 200	2007 →	Double Cab

Benelux exclusive distributor



Michel Quevrain

Tél.: +32 (0) 479 500 296
Fax: +32 (0) 83 660 109
Web: www.mqspri.com
e-mail: info@mqspri.com

Benelux exclusive distributor



Michel Quevrain

Tél.: +32 (0) 479 500 296
Fax: +32 (0) 83 660 109
Web: www.mqspri.com
e-mail: info@mqspri.com

Benelux exclusive distributor



Michel Quevrain

Tél.: +32 (0) 479 500 296
Fax: +32 (0) 83 660 109
Web: www.mqspri.com
e-mail: info@mqspri.com