

FORD


ROAD RANGER®

PICKUP-ACCESSORIES



MONTAGEANLEITUNG

ASSEMBLING INSTRUCTION / INSTRUCTION DE MONTAGE

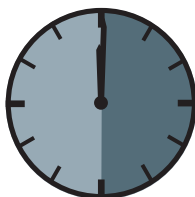

90 Minutes

Montagesatz für Original Ford Ranger Überrollbügel auf Roll N Lock /
Mounting kit for original Ford Ranger roll bar on Lock N Roll /
Kit de montage pour barre de Ford Ranger rouleau original sur Verrouiller N Roll

Ford Ranger: Modelle; Double Cab 2012->

Article-Nr: 15V9319

Road Ranger
Dr. Höhn GmbH
Künzelsauer Str. 13
D-74653 Ingelfingen

Phone: +49(0) 79 40 / 92 02 41 -42
Fax: +49(0) 79 40 / 92 02 45

E-Mail: roadranger@hoehn.de
www.hoehn.de

WWW.ROADRANGER.DE


ROAD RANGER®

PICKUP-ACCESSORIES

Teileliste / Parts list / Lista de accesorios

1	15V5134.R / 15V5135.L 1x	
2	15V4136.R / 15V4137.L 1x	
3	15V5132.R / 15V5133.L 1x	
4	15V8034.R / 15V8035.L 1x	
5	13H5024 2x	
6	13H5240 2x	
7	005069 2x	
8	005909 2x	
9	15V5131 2x	
10	005872 1x	
11	15V5138 1x	

a		M6 x 20; 933 A2	2x
b		M8 x 20; 912 Zn	4x
c		M8 x 25; 7991 Zn	4x
d		M10 x 40; 933 Zn	2x
e		Ø 6,4; 125 A2	2x
f		Ø 8,4; 125 Zn	8x
g		M8; 934 Zn	4x
h		Ø 10,5; 9021 Zn	2x
i		Ø 6; 127 A2	2x
j		Ø 8; 127 Zn	8x
k		Ø 10; 127 Zn	2x
l		SW 10 mm	2x
m		SW 17 mm	2x
n		M6; W-0942 A2	2x
o		M5 x 16; 7500 ZnNi8A+VS	2x
p		SW 8 mm	2x
q		Ø 32; 15168	1x

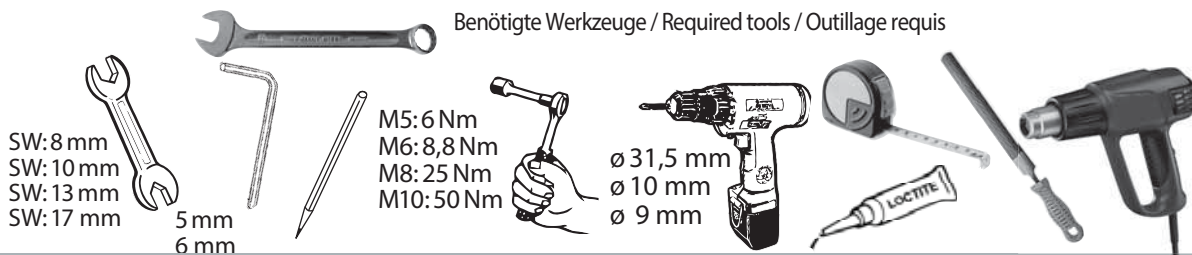

Montagesatz für Original Ford Ranger Überrollbügel auf Roll N Lock /
 Mounting kit for original Ford Ranger roll bar on Roll N Lock /
 Kit de montage pour barre de Ford Ranger rouleau original sur Roll N Lock






Ford Ranger: Modelle; Double Cab 2012->

Article-Nr: 15V9319


Revision 3: 06.06.2013

WWW.ROADRANGER.DE


page / Seite 2

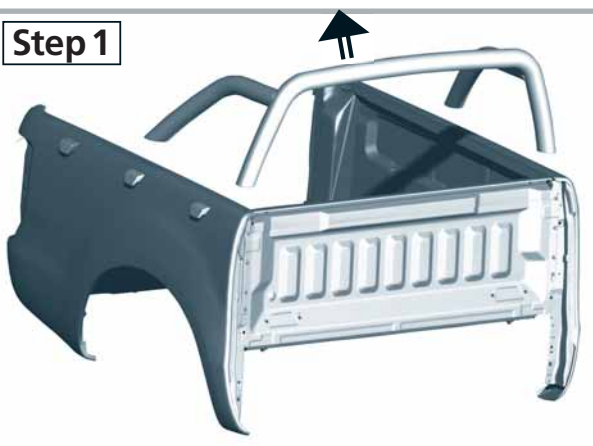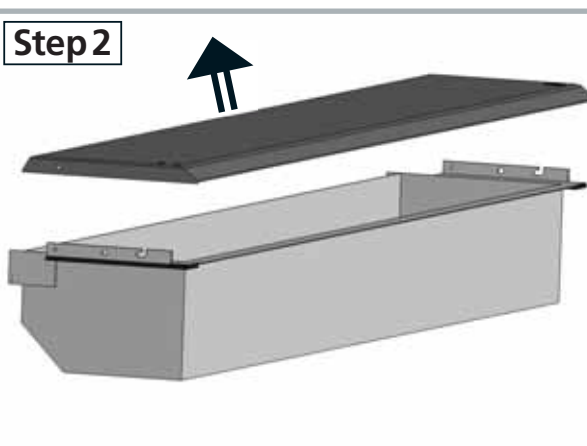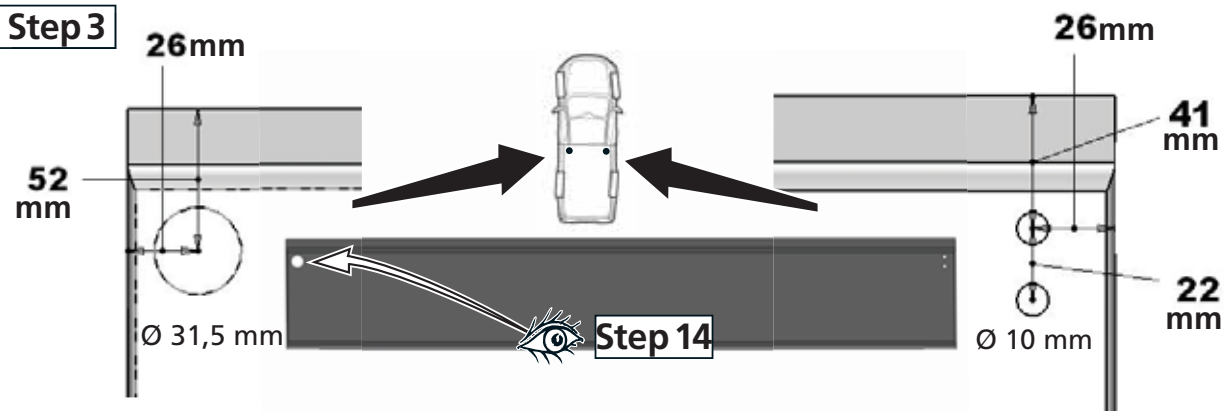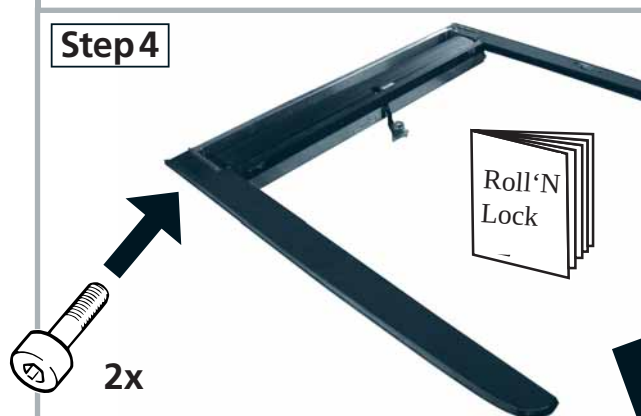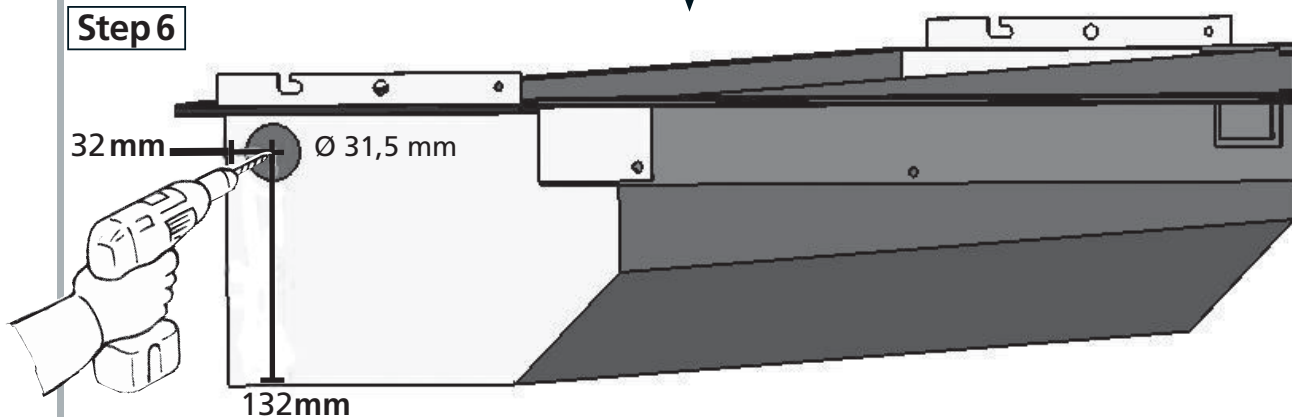Step 1**Step 2****Step 3****Step 4****Step 5****Step 6**


Step 7

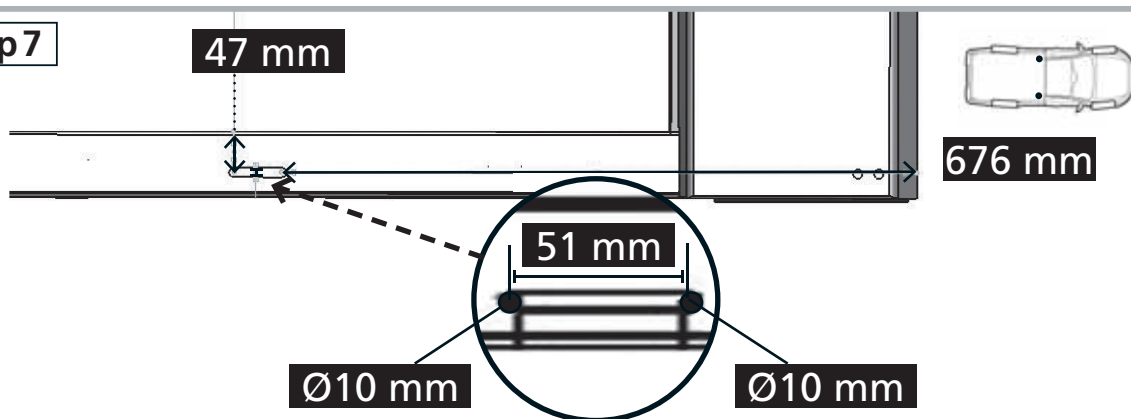


Step 8

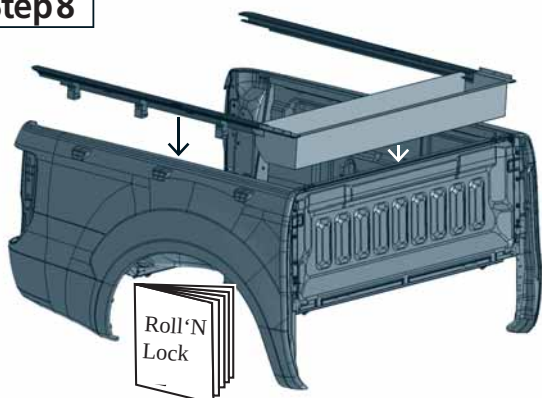

Step 9

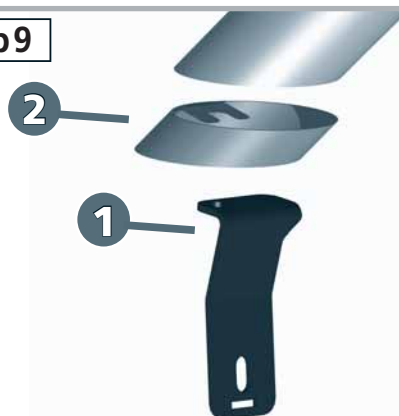


Step 10

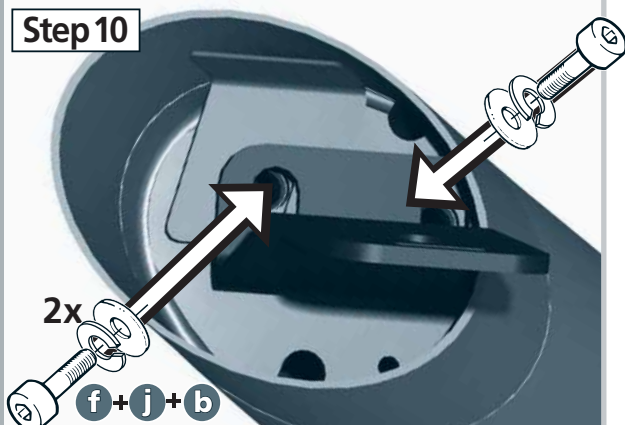


Step 11




Step 12

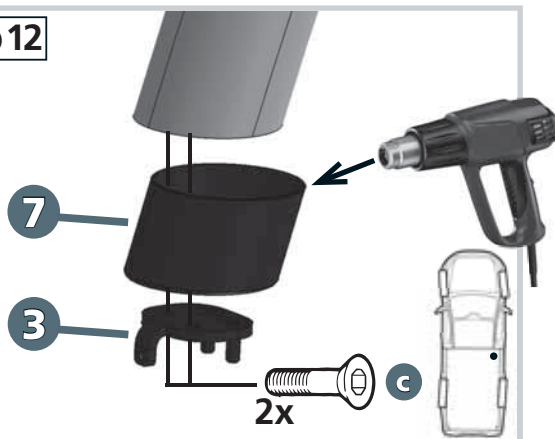


Step 13

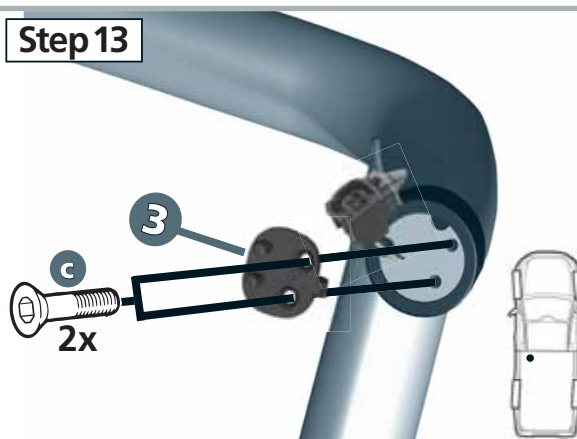


Step 14

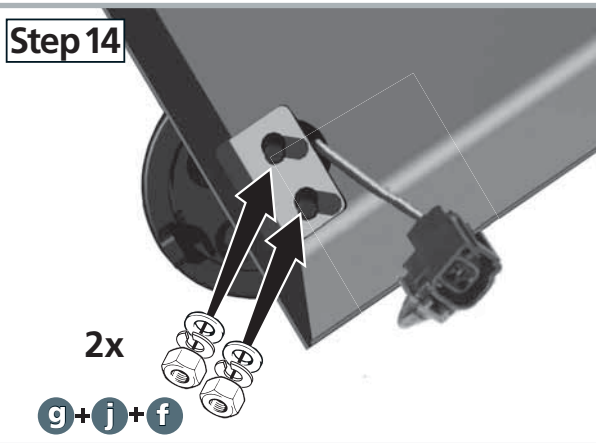


Step 15

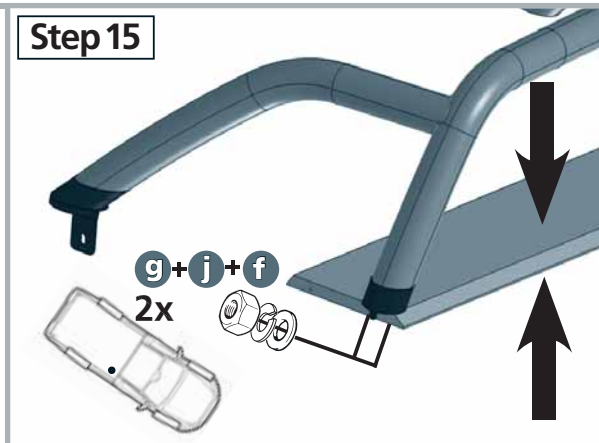


Step 16

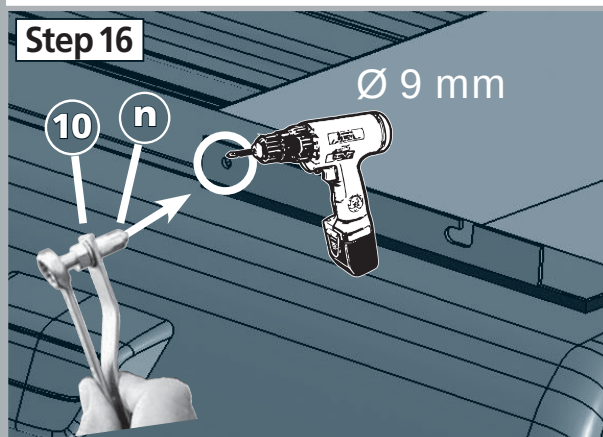


Step 17

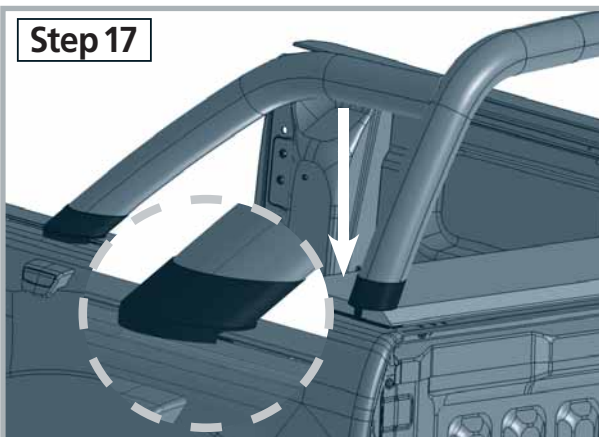


Step 18

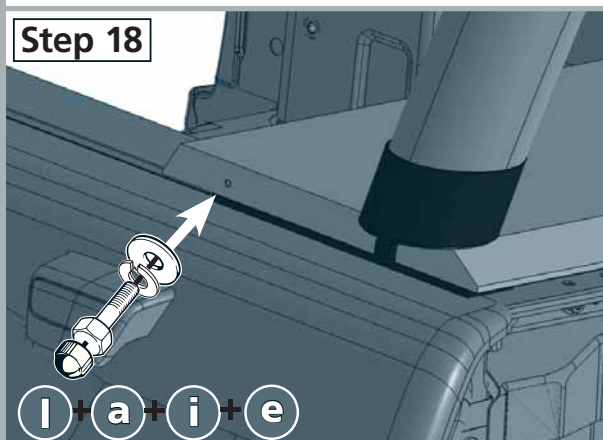


Step 19

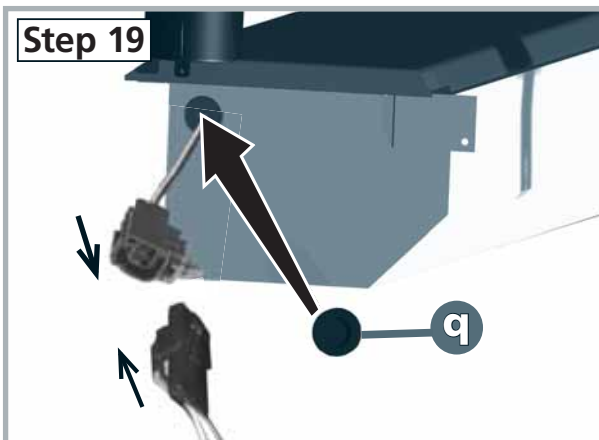


Step 20

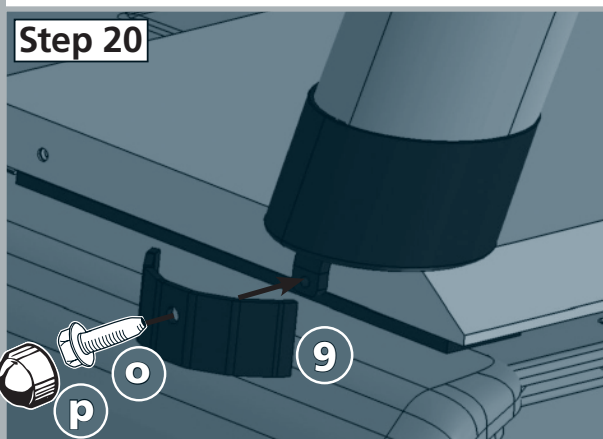

Step 21

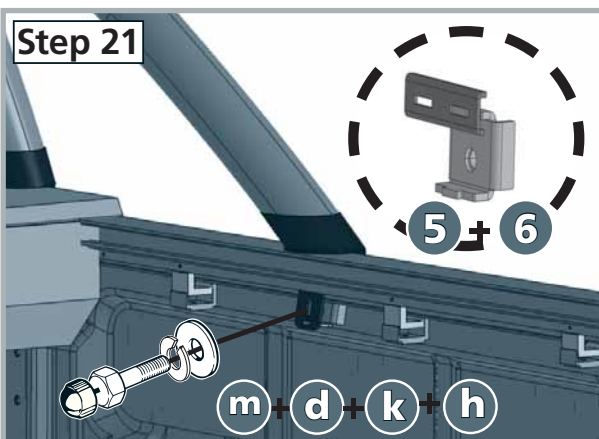

Step 22

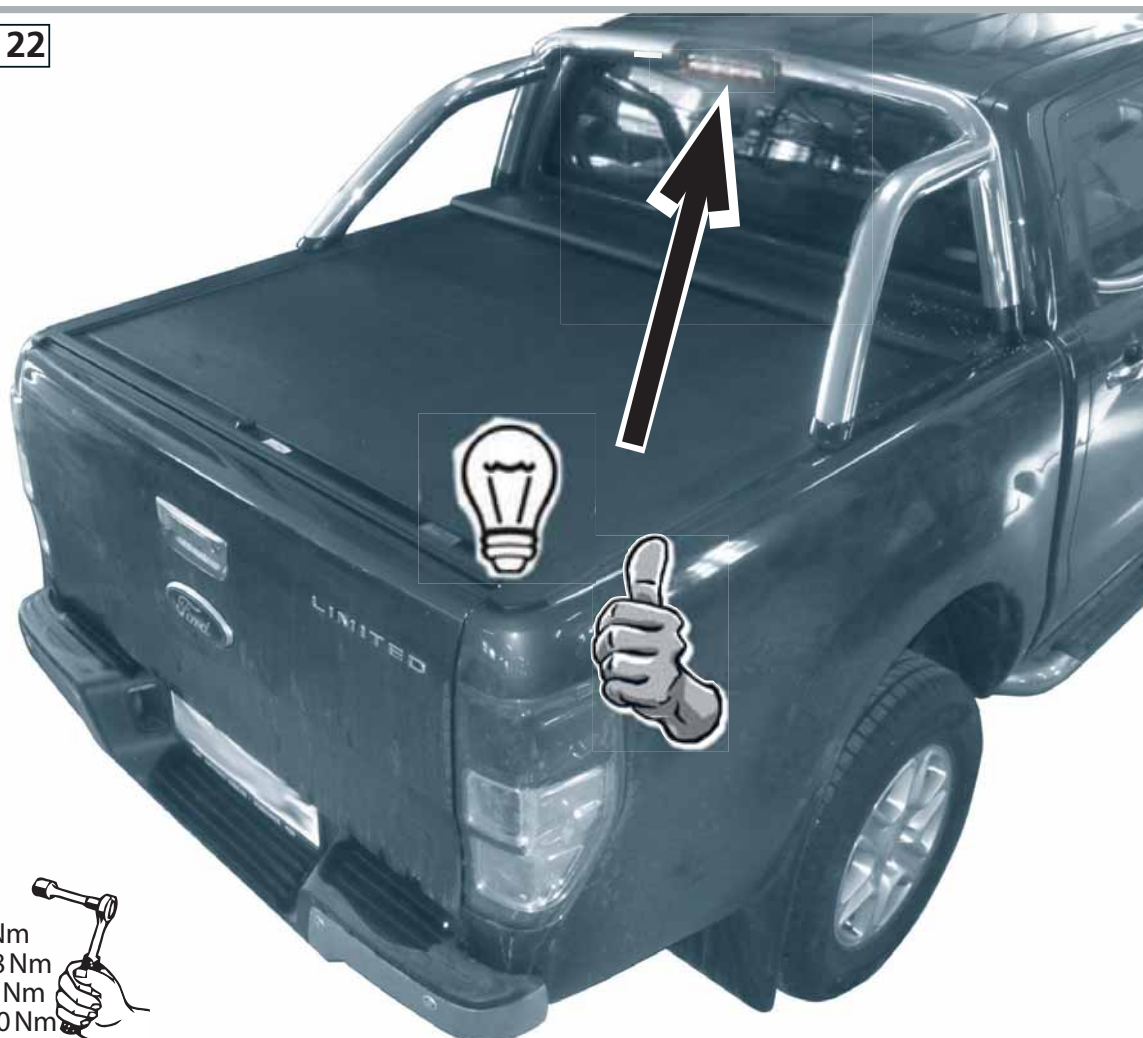

M5: 6 Nm
M6: 8,8 Nm
M8: 25 Nm
M10: 50 Nm